



**TRANSMISSION HARNESS CONNECTOR  
VALVE BODY SIDE**

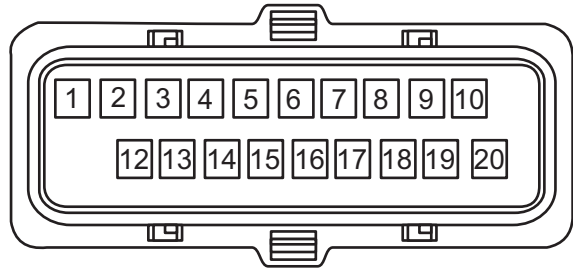

**TRANSMISSION CASE  
HARNESS CONNECTOR**

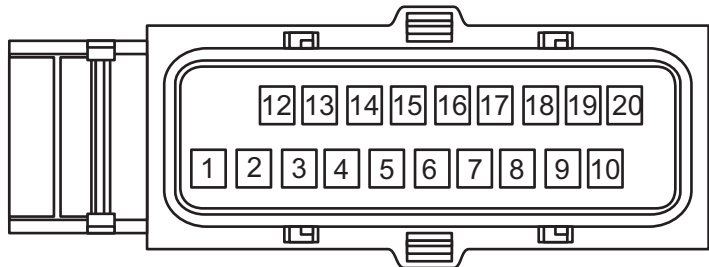

**TERMINAL NUMBER  
AND WIRE COLOR**

**TERMINAL/WIRE  
DESCRIPTION**

1 (VIOLET/GREY)	SHIFT SOLENOID E (SSE)
2 (BROWN/YELLOW)	TRANSMISSION FLUID TEMPERATURE SENSOR (TFT)
3 (GREY/VIOLET)	TRANSMISSION FLUID TEMPERATURE SENSOR SIGNAL RETURN (GROUND)
4 (VIOLET/WHITE)	TRANSMISSION RANGE SENSOR (TR1)
5 (YELLOW)	TRANSMISSION RANGE SENSOR (TR2)
6 (BLUE/ORANGE)	TRANSMISSION RANGE SENSOR (TR3)
7 (VIOLET)	TRANSMISSION RANGE SENSOR (TR4)
8 (BROWN/BLUE)	TRANSMISSION RANGE SENSOR SIGNAL RETURN (GROUND)
9 (BROWN/BLUE)	INPUT/OUTPUT SENSOR ISS/OSS SIGNAL RETURN (ISS/OSS GROUND)
10 (BROWN/GREEN)	OUTPUT SHAFT SPEED SENSOR (OSS)
11 (NOT USED)	
12 (BROWN/WHITE)	SHIFT SOLENOID D (SSD)
13 (BLUE/GREEN)	SHIFT SOLENOID A (SSA)
14 (BLUE/GREY)	TORQUE CONVERTER CLUTCH SOLENOID (TCC)
15 (BLUE/GREEN)	TRANSAXLE SOLENOID POWER CONTROL (TSPC)
16 (GREEN/BROWN)	SHIFT SOLENOID B (SSB)
17 (GREY/ORANGE)	SHIFT SOLENOID C (SSC)
18 (YELLOW/VIOLET)	LINE PRESSURE CONTROL SOLENOID (LPC)
19 (WHITE/ORANGE)	TURBINE SHAFT SPEED SENSOR (TSS)
20 (VIOLET/GREEN)	TURBINE/OUTPUT SENSOR ISS/OSS POWER SUPPLY

Figure 6