


GM 6T30/40/45/50 GENERATION I & II INFORMATION

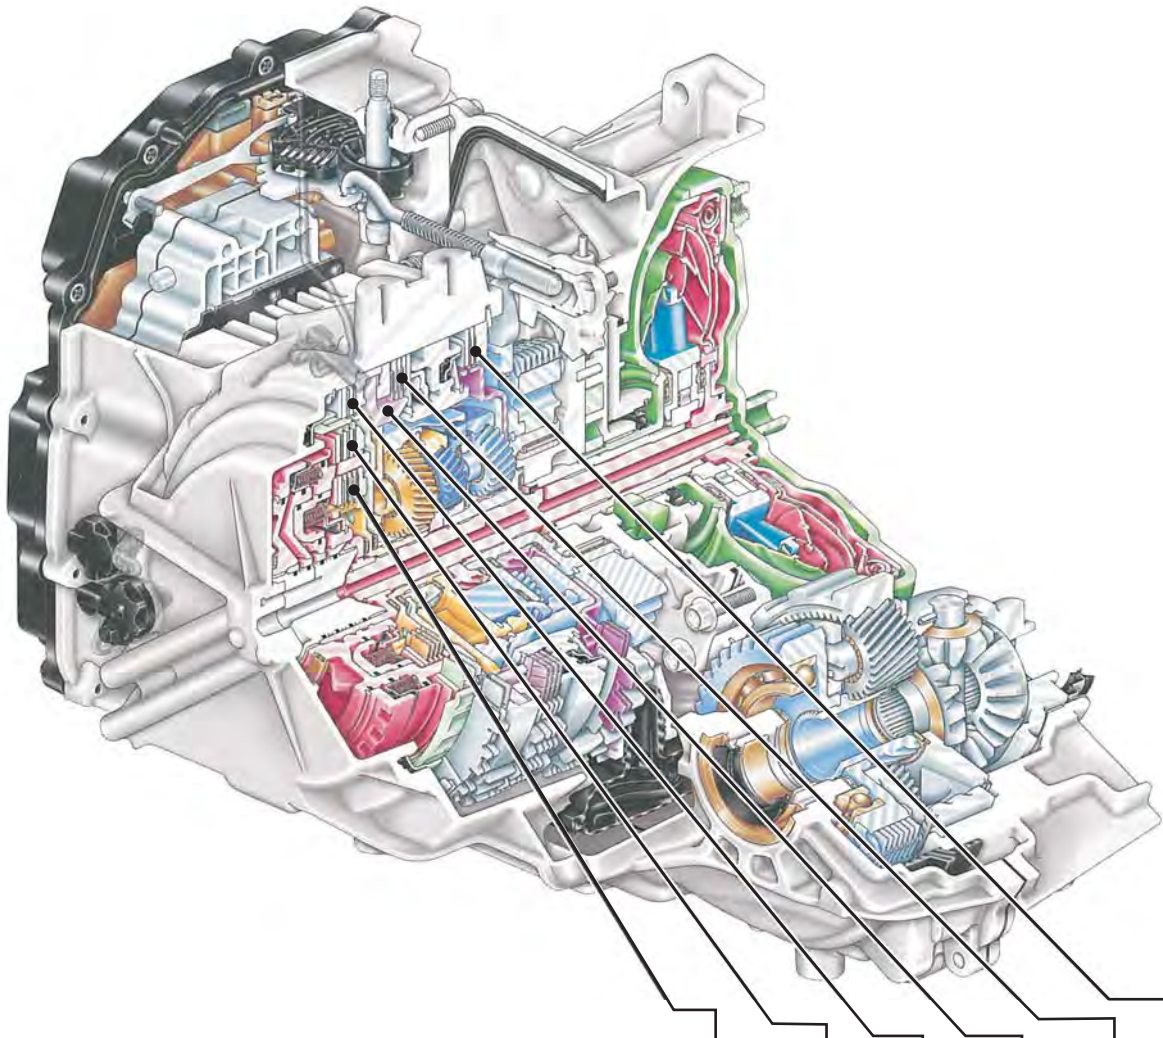

RANGE	GEAR	SHIFT SOL (On/Off)	1-2-3-4CL PC SOL 5 N.L. (GEN1)	1-2-3-4CL PC SOL 5 N.H. (GEN2)	2-6 CL PC SOL 4 N.L.	3-5 REV CL PC SOL 2 N.H. (GEN1)	3-5 REV CL PC SOL 2 N.L. (GEN2)	LO/REV 4-5-6 CL PC SOL 3 N.H.	4-5-6 CLUTCH	3-5 REV CLUTCH	2-6 CLUTCH	LOW ONE-WAY CLUTCH	LO/REV CLUTCH	1-2-3-4 CLUTCH
PARK	P	ON	OFF	OFF	OFF	ON	OFF	OFF					APPLIED*	
REV	R	ON	OFF	OFF	OFF	OFF	ON	OFF		APPLIED			APPLIED	
NEUT	N	ON	OFF	OFF	OFF	ON	OFF	OFF					APPLIED*	
D R I V E	NEUTRAL ← 1ST BRAKING IDLE CTRL CAPABLE	OFF	ON	ON	OFF	ON	OFF	OFF					APPLIED	APPLIED
	1ST	OFF	ON	ON	OFF	ON	OFF	ON				HOLD		APPLIED
	2ND	OFF	ON	ON	ON	ON	OFF	ON			APPLIED			APPLIED
	3RD	OFF	ON	ON	OFF	OFF	ON	ON		APPLIED				APPLIED
	4TH	OFF	ON	ON	OFF	ON	OFF	OFF	APPLIED					APPLIED
	5TH	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	APPLIED	APPLIED			
	6TH	OFF	OFF	OFF	ON	ON	OFF	OFF	APPLIED		APPLIED			

\* APPLIED WITH NO LOAD

Copyright © 2015 ATSG

Figure 16